

How to fill the HINET user name and password into AP router 如何輸入 HINET 的使用者名稱及密碼在無線分享器內

2008.12.19


- (1) **目的:** 在 AP 無線分享器內預設 HINET PPPoE 撥號的連線帳號及密碼，
經設定以後上網時都不需要撥接動作

請注意: 連線帳號及密碼就是申請 ADSL 時，中華電信人員附給你的一張小卡
上面有用戶識別碼及密碼，提醒用戶識別碼後面加上 @hinet.net 就是連線帳號

- (2) **設備需求:** 在此以 AP 無線分享器 Buffalo WHR-G125 為例
(市售他型亦可，請參考其使用手冊)



(3) 輸入步驟:

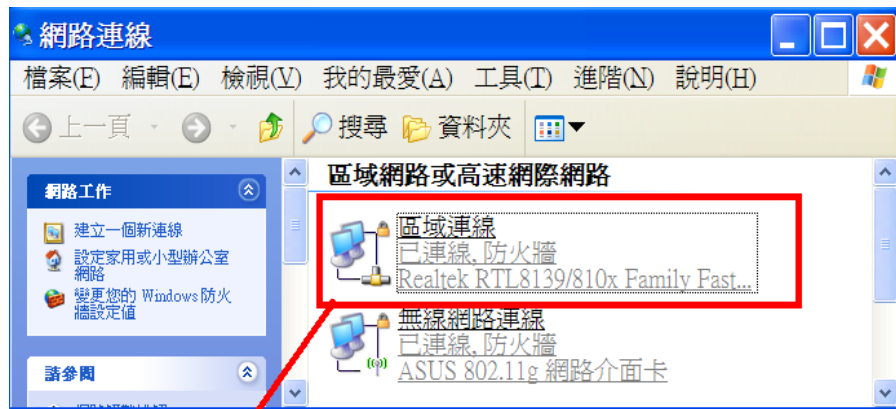


按滑鼠右鍵 選狀態 / 支援

(3.1) 按網路上的芳鄰右鍵選內容進入網路連線畫面

(3.2) 讀出預設閘道值 192.168.11.1 (此以 AP 無線分享器 Buffalo WHR-G125 為例)

市售他型 AP 無線分享器數值稍微差異 192.168.xx.1

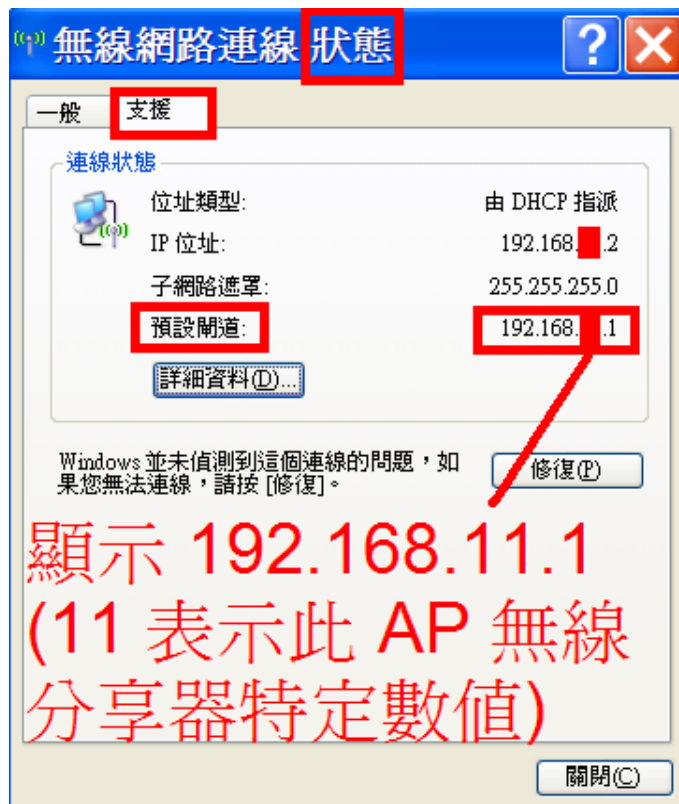

(3.3) 輸入預設閘道值於 IE (Internet Explorer) 位址



(3.4) 輸入 AP 無線分享器的使用者名稱
(Buffalo WHR-G125 使用者名稱: root ; 密碼 : 無)

需要授權 ✕

http://192.168.1.1 要求輸入帳號及密碼，該網站說: "AirStation"

使用者名稱:

密碼:

使用者 root
無密碼

(3.5) 選 Internet/LAN 再選 PPPoE 再選 Edit Connection List

WPKR-G125

Setup **Internet/LAN** Wireless Config Security LAN Config Admin

Internet **PPPoE** LAN NAT Route

Default PPPoE Connection	No Active Session
IP Unnumbered PPPoE Connection	No Active Session

Apply

PPPoE Connection List

Number	Name	Status
Connection Settings not Registered		

Edit Connection List

Preferred Connections

No.	Name	Destination address	Source address
Preferred Connection Settings not Registered			

Edit Preferred Connections

communicate
PPPoE. On r
authorization
user name ar
is required. A
performed co
detection of F
have to config
here.

[Return to p
If you select
page] , char
and the utili
previously d

Note:

- When
destin
[Defau
[Desti
Unnu
set, th
here i
auton
- If the f
is edit
destin
or del

選 Internet/LAN 再選 PPPoE
再選 Edit Connection List

(3.4) 輸入 中華電信人員附給你的一張小卡上面有用戶識別碼及密碼，
提醒用戶識別碼後面加上 @hinet.net 就是連線帳號，完成後按 Add

XXXXXXXXXX 表示HINET 的帳號
其後接 @hinet.net

Setup		Internet/LAN	Wireless Config	Security	LAN Config	Admin Config
Internet	PPPoE	LAN	NAT	Route		

PPPoe Connection No.1-Add

Name of Connection	joy
User Name	XXXXXXXXXX@hinet.net
Password	●●●●●●●●●●●●●●●● ●●●●●●●●●●●●●●●● (Confirmation)
Service Name	

Advanced Settings

Connection Type	Continuous Connection
Disconnect Flag	When both LAN and Internet Communication Stop
Disconnect Time	5 Minutes <small>(If the Disconnection Time is set to 0 minutes, then the AirStation will maintain the connection indefinitely)</small>
Authorization	Automatic Authorization
MTU Size	1454 Bytes
MRU Size	1454 Bytes
Keep Alive	<input checked="" type="checkbox"/> Enable

Add

Note:

- When one eff destination is [Default Desti [Destination (Unnumbered set, the PPPo here is set to automatically
- If the PPPoE I is edited and destination b or deleted the destination is another active If there is no destination, it as no destina
- If the PPPoE I is edited and

(3.7) 出現 Enable 表示設定完成

WNR-G125

Setup **Internet/LAN** Wireless Config Security LAN Config

Internet **PPPoE** LAN NAT Route

Service name

Advanced Settings

Connection Type: Continuous Connection

Disconnect Flag: When both LAN and Int

Disconnection Time: 5 Minute

Idle Time: (If the Disconnection T then the AirStation will

Authorization: Automatic Authorization

MTU Size: 1454 Bytes

MRU Size: 1454 Bytes

Keep Alive: Enable

Enable 表示設定完成

Display/Customize Preferred Connections

No.	Name	Status	Customize
1	joy	Enable	OFF Edit Delete

(3.8) 連接網路收音機，初步請先以有線方式連線上網
(提醒電源關閉一次，等開機 20 秒)

(3.9) 待成功後拔掉有線連線，第二步請以無線方式連線上網
(提醒電源關閉一次，等開機 20 秒)